

Overseas Use

■ International Roaming

International Roaming (WORLD WING) Service	560
Communication Services Available Outside Japan	561
Before Use	562

■ Making/Answering Calls from Place of Stay

Making Calls	567
Answering Calls	570

■ Settings for Overseas Use

Switching Networks	571
Setting Preferred Networks <Add to preferred list>	573
Setting Operations in Roaming	575

International Roaming (WORLD WING) Service

International roaming (WORLD WING) is a service that provides telephone and other types of communications overseas, outside the FOMA network service area, by using affiliated operators' networks.

The international roaming service allows subscribers to use their FOMA handsets to make voice and video calls*, send/receive email and Short Message Service (SMS), and make use of communication services such as packet communication connected to PCs, etc.

In addition, network services such as the Voice Mail and Call Forwarding Services are available.

*: For information such as countries, areas or telecommunications carriers available, see DoCoMo's Web page.

- Use of the international roaming service requires a subscription to WORLD WING. In addition, a UIM (green) made available for WORLD WING must be installed in the FOMA handset.
- A UIM (blue) must be changed to a UIM (green).
If you purchase a subscription to WORLD WING at a DoCoMo information desk, the card will be exchanged free of charge.
- Communication services and available functions available depend on the overseas network operator. →P561
- Overseas networks use the W-CDMA network and GSM/GPRS network.

W-CDMA network	3GPP (3rd Generation Partnership Project)* is a global standard. A 3G mobile communication system is compliant to 3GPP. *: A regional standardization organization founded for the development of common technology specification relating to the 3G mobile communication system (IMT-2000).
GSM (Global System for Mobile Communications) network	The 2nd generation mobile communication system is the most widely used digital communication system around the world.
GPRS (General Packet Radio Service) network	The 2.5 generation mobile communication system is a communication method that enables high-speed packet communication* through the GPRS using GSM. *: Packet communication with transmission speeds of up to 85.6 kbps are available.

- By default, network switching overseas takes place automatically. →P571

Communication Services Available Outside Japan

Available Communication Services

The following communication services are available outside Japan:

- Services may be unavailable depending on the network operator or network used.

Communication service	Description
Voice call	The phone number used in Japan can also be used for making and answering domestic calls in the country of stay and making international calls to Japan or other countries.
Video call	Videophone communication is available with subscribers of specific overseas 3G mobile operators or FOMA handset users in Japan.
Browser	Internet connection is even available overseas.
Email	The email address used in Japan can also be used for email exchange overseas.
Short Message Service (SMS)	The recipient's FOMA handset phone numbers can be used to exchange SMS messages between FOMA handset users overseas. → P301
Data communication by connecting to PC, etc.	Packet communication or data communication using line switching is available overseas for connecting to PCs, etc.

Available Communication Systems and Services

Available communication services differ between networks in Japan and overseas.

The different communication systems and services available are as follows:

	Network	Voice call	Video call	Browser	Sending/ Receiving email	SMS message	Data communication by connecting to PC, etc
Japan	FOMA	○	○	○	○	○	○
Overseas	W-CDMA	○	○	○	○	○	○
	GSM	○	×*	○	○	○	①
	GPRS	○	×*	○	○	○	②

○ : Available (Communication services may be available depending on the network operator or location used.)

× : Unavailable

① : Available only for data communication using line switching.

② : Available only for data communication using packets.

*: Any incoming video call does not result in any arrival call acts. Any outgoing video call is terminated and a connection failure message appears. Tap [Voice] to make a voice call.

- Available communication services differ depending on the overseas communication network operator in use. For details on available communication services during international roaming, refer to the WORLD WING Web site.

Before Use

Check the following before leaving Japan, while overseas, and after coming back to Japan.

Before Leaving Japan

To use your FOMA handset outside Japan, make sure of the following before leaving Japan.

■ Subscription

A subscription to WORLD WING is required.

- WORLD WING is an optional service that requires a separate subscription. No monthly charges apply.
- A UIM card (green) made available for WORLD WING must be installed in the FOMA handset for overseas use. →P51

■ Battery charging

The included AC adapter M01 to charge the FOMA handset can be used overseas.

- Purchase a plug adapter applicable to your destination region at a home electronics or overseas travel goods store, before departure.
- Do not use a transformer for charging.
- Notes on the use of the AC adapter →P21
- Charging the battery →P56

■ Network services

If you have subscribed to a network service, some operations, such as network service set/reset, can be performed even while outside Japan. The availability of services is as follows:

Name of service	Availability
Voice Mail Service	Can be set.*
Call Waiting Service	Can be set.
Call Forwarding Service	Can be set.*
Nuisance Call Blocking Service	Can be set.*
Dual Network Service	Cannot be set.
Caller ID Display Request Service	Can be set.*
English Announcement	Can be set.*
Caller ID Notification	Caller IDs may not be sent correctly.*
Drive Mode	Can be set, but should be canceled because it is not available outside Japan.
Roaming (roaming guidance)	Can be set.*
Roaming (incoming call barring when roaming)	Can be set.

*: May not be set in some service areas.

- Even though you may be able to set/cancel some network services, those services may not be available depending on the overseas carrier. Also, there are some network services only available in Japan. When using network services outside Japan, refer to the "International Roaming Guide" and the "Network Services Operation Guide" before departure.
- To perform Voice Mail or Call Forwarding Service operations from overseas, remote operation must be enabled in Japan in advance. →P575

Other Convenient Applications/Functions

The FOMA handset provides the following convenient functions for overseas use:

Applications/functions	Description
Clock	Check the date/time in Japan and your current location at the same time, after setting the date/time of your area. →P401
Dictionaries	Translate between English and Japanese. →P401
Network switching	Set network switching procedures or manually select and set the network to be used. →P571
Priority list addition	Set the priority of networks to be used in advance. →P573
Remote access control	Remotely operate the Voice Mail or Call Forwarding Service from outside Japan. →P575
Reception restriction for roaming	Set to reject incoming calls/messages while roaming internationally. →P575
Roaming guidance	Set to play a voice announcement while roaming internationally. →P576

Short Message Service (SMS)

While roaming internationally, SMS messages can be exchanged with other FOMA handsets and overseas carrier's handsets, inside or outside Japan.

- As an address, enter "+" and the other party's country code, then the other party's phone number. However, if the phone number starts with "0" (zero), exclude the "0".
- An overseas carrier's handset may not be able to handle all the characters available to a FOMA handset and such characters may not be correctly displayed. For details, refer to the "International Roaming Guide" and the "Network Services Operation Guide".

Booklets recommended for using a FOMA handset outside Japan

Before using the FOMA handset outside Japan, please read the booklets listed below.

Title	Description
International Roaming Guide	Explains details of the international roaming service, including the contents of the service, charges and notices.
Network Services Operation Guide	Explains the contents and notices regarding various network services.

NOTE

- The Quick manual "Overseas Use" useful for referring to operations is provided on P630, which provides a convenient reference for overseas use of your FOMA handset.
- Charges for overseas use will be added to the bill for monthly services. Depending on the overseas carrier, billing may be in the next or a later month. Also, calls made in the same charging period may be charged in different months.

While Overseas


Network switching

By default, the FOMA handset is set to search for and select an available network when its power is turned ON outside Japan.

- If the FOMA handset is moved out of the set network's service area, it automatically searches for and selects another available network.

Display view

Available communication services such as voice or video call can be checked with icons that indicate the status of the network. Signal strength can be checked in 5 levels while connected to a GSM network.

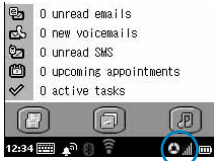


Display	Description
(Orange)	Roaming within GSM network area
(Orange)	Roaming within GPRS network area
(Orange)	Roaming within W-CDMA network area
(Red)	The UIM is not inserted
(Gray)	The handset is outside the network coverage area.

Inquiries

For inquiries about lost or stolen handsets, charge or failure of handsets outside Japan, contact DoCoMo at the numbers shown in "For Lost or Stolen Handsets or Charges from overseas" or "About Failure" from overseas. For Contact addresses, see the back cover of the manual.

- The Contact numbers must be prefixed with the code as shown in "International Phone Code for Universal Numbers (Table 1)" or "International Access Code (Table 2)" assigned to the place of stay. →P565, P566

NOTE

- The indications of networks in use are in green when the handset is in FOMA network service area.
- The network can be manually selected for use. →P571
- Tap  to view the network or signal status in text. Network (carrier) in use can also be viewed.
- If you have any problem about overseas use of your FOMA handset, see "Troubleshooting (for Overseas Use)". →P604

■ International phone code for Universal Number (Table 1)

The International Phone Code for Universal Number is a number used to make various inquiries from outside Japan. For an inquiry, make a call by prefixing the number for the country to the contact number.

<Example: To make an inquiry about communication trouble from the U.K.>

00-800-5931-8600

The International phone code for Universal Number of major countries is given below.

Area		International phone code	Area		International phone code
A	Argentina	00	L	Luxemburg	00
	Australia	0011	M	Malaysia	00
	Austria	00	N	Netherlands	00
B	Belgium	00		New Zealand	00
	Brazil	0021		Norway	00
C	Canada	011	P	Philippines	00
	China	00	S	Singapore	001
	Columbia	009		South Korea	001
D	Denmark	00		Spain	00
F	France	00	T	Sweden	00
G	Germany	00		Switzerland	00
H	Hong Kong	001	U	Taiwan	00
I	Ireland	00		Thailand	001
	Israel	014	U.K.	00	
	Italy	00	U.S.A.	011	

- May not be available in some cases.
- Universal numbers are available only from the countries listed above.
- When an inquiry is made using a phone in a hotel, you may be charged. Check with the hotel in advance.

■ Major International Access Codes (Table 2)

The International Access Code is a number used in place of the International phone code for Universal Number when it is not available for inquiries outside Japan. For an inquiry, make a call by prefixing the number for the country to the contact number.

<Example: To make an inquiry about communication trouble from the U.K.>

00-81-3-6718-1414

The International Access Code of major countries is given below.

Area		International phone code	Area		International phone code
A	Australia	0011	M	Monaco	00
B	Belgium	00	N	Netherlands	00
	Brazil	0041/0021/0023		New Zealand	00
C	Canada	011		Norway	00
	China	00	P	Philippines	00
	Czech	00		Poland	00
D	Denmark	00		Portugal	00
F	Finland	00/990	R	Russia	810
	France	00	S	Singapore	001
G	Germany	00		South Korea	001
	Greece	00		Spain	00
H	Hong Kong	001	Sweden	00	
	Hungary	00	Switzerland	00	
I	India	00	T	Taiwan	002
	Indonesia	001		Thailand	001
	Ireland	00		Turkey	00
	Italy	00	U	U.A.E.	00
L	Luxemburg	00		U.K.	00
	M	Macao		00	U.S.A.
Malaysia		00	V	Vietnam	00

After Coming Back to Japan


After coming back to Japan, a network is searched automatically and the FOMA network will be set.

If your handset is set to use manual network selection, you must manually reset the handset to use the FOMA network.

- The network can be manually selected for use. → P571

Making Calls

 
A voice or video call can be made from outside Japan using the international roaming service.

- Enter "+" then the country code and the phone number to quickly make an international call from your overseas location to Japan or to another country.
- If you and the other party are using a carrier compatible with a FOMA video call, an "International Video Call" can be made by tapping  at the end of the international phone number dialed.
 - For information such as countries, areas or carriers available, see DoCoMo's Web page.
 - Depending on the other party's handset, the image appearing on the FOMA handset may be distorted or the connection may not be made.

1 Tap (*Phone*) on the Application Selector bar



Tap [0]-[9], [*] or [#] to enter the phone number.

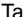- Tap  to delete a digit in the phone number from the right. Pointing deletes all of the phone number entered.

2 Enter the other party's phone number

- Up to 40 digits can be dialed. If more than 40 digits are entered, only the last 40 digits will be dialed.
- Point to [0] to enter "+".
- Pause ("p"), Wait ("w"), "#" and " * " can be entered.
Entering a pause and wait → P78

■ To make calls to a fixed line

- + **Country code - Area code with 0 removed - City code - Number**
- Some countries, such as Italy, or regions may require the leading "0".


■ To make calls to a mobile phone

- + **Country code - 90 - XXXX - XXXX**
- + **Country code - 80 - XXXX - XXXX**
- Enter the phone number excluding the leading "0".

■ To call PHS phones

- + **Country code - 70 - XXXX - XXXX**
- Enter the phone number excluding the leading "0".

3 Tap /press

- Tap  to make a video call. →P91

■ If you hear a busy signal

The line is busy. Press  and try again at a later time.

4 Talk on the phone




The call duration is displayed.

[Mute]/[Unmute]

: Tap to mute the sound and your voice cannot be heard by the other party. Tap again to cancel the mute.



: Tap to lock the Touch screen. Tap again to cancel the lock.

When locked, no operations other than tapping  are available.

[Hold]/[Resume]




: If you have subscribed to the Call Waiting Service, tap to hold the call. The other party hears an on-hold tone. Tap again to cancel the hold.

While holding a call, Mute cannot be set/canceled.

- Depending on your network, the Call Waiting Service may be impossible to be used.

In this case, this function cannot be used.

[Keypad] : Tap to display the Phone number entry screen
Tap [Back] to return to the Talking screen.

- Press  to turn the Speakerphone On. The other party's voice comes from the Speaker. Press again to turn the Speakerphone Off.
- Press  to adjust the earpiece volume.
- During a connection or call,  appears on the Status bar.

5 Press when you have finished your call

The call is terminated.

■ Country code for major countries

Country codes for major countries are as shown below (as of June 2005). →P80, P567

	Country	Code		Country	Code
A	Australia	61	G	Germany	49
	Austria	43		Greece	30
B	Belgium	32	H	Hong Kong	852
	Brazil	55		Hungary	36
C	Canada	1	I	India	91
	China	86		Indonesia	62
	Czech	420		Italy	39
E	Egypt	20	J	Japan	81
F	Fiji	679	M	Macao	853
	Finland	358		Malaysia	60
	France	33		Maldives	960

Country		Code	Country		Code
N	Netherlands	31	S	Sweden	46
	New Caledonia	687		Switzerland	41
	New Zealand	64	T	Tahiti	689
	Norway	47		Taiwan	886
P	Peru	51	Thailand	66	
	Philippines	63	Turkey	90	
R	Russia	7	U	U.K.	44
S	Singapore	65		U.S.A.	1
	South Korea	82	V	Vietnam	84
	Spain	34			



- For details, including the country codes of other countries, see the Web page of WORLD WING.

Making Calls Overseas

To make a call to a party in the country of stay, enter the other party's phone number and call in the same way as calls within Japan.

- If the other party is also using international roaming, make a call in the same way as calls from overseas, even if the other party is in the same country.

NOTE

- Storing an other parties' phone numbers with "+ country code" prefixed, etc. in the Contact list will simplify the procedure of making international calls. However, when the area code begins with "0", omit it. (For phone numbers in some countries and areas, such as Italy, "0" may be necessary.)
- The Enter phone number screen can also be displayed by pressing  in standby.
- If your call did not get through, tap [ Retry] on the screen to make another attempt to call the same number.
- The view of the Enter phone number screen fields can be changed. →P148
- The handset can be set not to show the call duration on the screen displayed while talking. →P144
- A Voice timer to notify you of the elapsed call time is available. →P137
- You can set your handset to vibrate or to sound a tapping sound each time you press a key on the phone number entry screen. →P136
- The handset can be set not to answer incoming calls, etc. during international roaming. →P575
- The handset can be set to play a message informing the caller that the call is being forwarded overseas. →P576
- Caller IDs may not be sent correctly.
- Some overseas network operators may charge you for calls that did not get through due to communication conditions.
- Some overseas network operators may charge you for calls to toll-free numbers.
- When you use the international videophone, the image of the other party displayed may be distorted or connection may not be established depending on the other party's handset. For details, visit the WORLD WING website.

Answering Calls


Answer incoming calls with your FOMA handset when you are outside Japan.

1 A call arrives

The ring tone sounds.

2 Tap [Answer]/press

The call is answered.

- If a video call arrives, tap [Answer]/press  to answer the call with the camera image enabled. Tap [Privacy] to answer the call with the camera image disabled.
- Tap [Reject] to reject the incoming call and the call for the caller is disconnected.
- Operations during conversation are the same as described in Step 4 of "Making calls".
→P568

3 Press when you have finished your call

The call is terminated.

■ To access your FOMA handset overseas from Japan

Entering your phone number in the same way as usual domestic calls allows a caller in Japan to make a call to your handset outside Japan, which you can answer.

Enter "090-XXXX-XXXX" to call

Or

Enter "080-XXXX-XXXX" to call

■ To access your FOMA handset overseas from countries other than Japan

Because a call is made via Japan regardless of the place of stay, entering "International Access Code", "81" (country code for Japan) then your phone number without the leading "0" of the area code allows a caller to make a call to your handset, in the same way as overseas calls to Japan.

Enter "International Call Access Code of staying country-81-90-XXXX-XXXX" to call

Or

Enter "International Call Access Code of staying country-81-80-XXXX-XXXX" to call

NOTE

- When the Status LED is set to On, it lights when a call arrives. →P145
- The vibrator can be enabled instead of the ring tone. →P135
- Depending on the country, you may be charged for receiving calls. In this case, you are charged the sum of international forwarding and call reception fees.
- Even when the other party makes a call with Caller ID, you may not be notified of it depending on the overseas carrier. Moreover, depending on the other party's network, a number different from the other party's Caller ID may be shown.
- Calls that arrive during international roaming are forwarded from Japan, regardless of the place of origin. The callers are charged for calls to Japan and the receivers for international forwarding.

Switching Networks

Default setting Band: Auto Search frequency: Medium

To use the FOMA handset overseas, the handset must be connected to a network available in the overseas location. The handset is set to automatically find and switch to an available network in the country of stay by default.

- Networks can be switched manually.
- A network cannot be switched when Self-mode is set.

Setting a Network Manually

You can select a network to use.

- Switch networks while overseas using the FOMA handset.

1 Tap  (*Phone*) on the Application Selector bar ► tap *Settings* on the Menu bar ► *Network*



Band

900/1800 MHz

: Set a network in the frequency band of 900/1800 MHz of GSM/GPRS.

1900 MHz

: Set a network in the frequency band of 1900 MHz of GSM/GPRS.

WCDMA: Set a network of W-CDMA such as the FOMA network.


Auto : Finds and sets to an available network automatically.

2 Tap the *Band* field and select the band or communication method

A search for networks of the selected band or communication method will start.

- If a previously used network is available, that network is automatically set.

3 Tap the *Available* tab

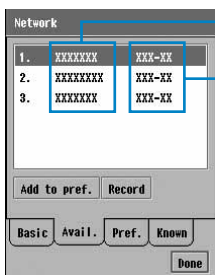

Provider name

Network code

Available provider name and network codes are displayed.

4 Tap a network ► [Record]


NOTE

- Tap the *Search frequency* field to select and set a frequency of searching networks from *Slow*, *Medium*, *Fast* and *Continuous*.
- Tap an icon (📶, etc.) indicating the network status on the Status bar to view the currently used network (carrier).
- When the *Band* is set to *Auto*, the battery drains quickly because a network is detected and set automatically. To save power, it is recommended that the network be set manually.
- If *Band* is set to *Auto*, a network is automatically found and set, however, depending on the network conditions or signal strength in the area, switching networks may take a while. W-CDMA networks are searched first. If you know that there are no W-CDMA networks in the area, it is recommended that the *Band* be set to *900/1800MHz* or *1900MHz* in advance.

Switching the network in use

The network in use can be switched to another available network.

- 1 Tap 📞 (*Phone*) on the Application Selector bar ➤ tap *Settings* on the Menu bar ➤ *Network* ➤ the *Available* tab on the network screen

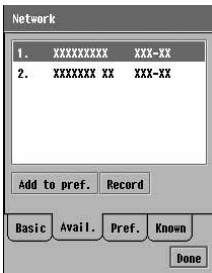

- 2 Tap a network ➤ [Record]

NOTE

- If no available network is found, tapping in the message display area restarts searching for a network.
- Depending on network conditions, the selected network may not be available. In this case, a message indicating connection failed is not displayed but another available network is automatically found and switched. However, if the previously set network is the only available network, the network may be set again.
- If *Band* is set to *Auto*, a network is automatically found and set, however, depending on the FOMA handset settings, a network may not be searched automatically. In this case, you need to turn the handset power off and back on before starting a search.

Searching for a Network Again

If an available network cannot be found automatically or if switching networks manually, a search for networks can be conducted again and any found network can be set.

- 1 Tap 📞 (*Phone*) on the Application Selector bar ➤ tap *Settings* on the Menu bar ➤ *Network*

2 Tap [Find new NW] on the network screen

A search for networks is conducted according to the setting in *Band*.

- If *Band* is set to *Auto*, a found network is automatically set.
- If *Band* is set to other than *Auto*, a selection screen of networks opens. Tap a network to set the network. If the previously used network is available, the network is automatically set.

Add to preferred list

Setting Preferred Networks

Save networks in a preferred list and specify an order. A found network is automatically set in accord with the preferred order.

- Up to 20 entries can be saved in the Preferred list.

1 Tap (*Phone*) on the Application Selector bar ▶ tap *Settings* on the Menu bar ▶ *Network*

2 Save a network in the preferred list

■ To save a network from currently available networks


- ① Tap the *Available* tab
- ② Tap a network ▶ [Add to preferred]

■ To save a network from known networks

- ① Tap the *Known* tab
 - If the tab is not displayed on the screen, tap ◀ / ▶ in the tab display area. →P44
- ② Tap a network ▶ [Add to preferred]

■ To save a new network


- ① Tap the *Preferred* tab ▶ [New]

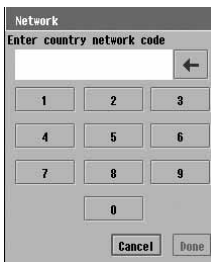

The screenshot shows a dialog box titled "Network" with a sub-header "Enter country network code". Below the text is a numeric keypad with buttons for digits 1 through 9 and 0. At the bottom of the keypad are "Cancel" and "Done" buttons.

- Tap [Cancel] to cancel saving.
- If the tab is not displayed on the screen, tap ◀ / ▶ in the tab display area. →P44

- ② Enter a network code ▶ [Done]

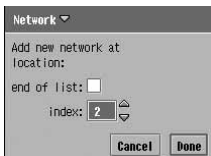

The screenshot shows a dialog box titled "Network" with a sub-header "Add new network at location:". Below the text is an "end of list:" checkbox and an "index:" field with a numeric keypad showing the number 2. At the bottom are "Cancel" and "Done" buttons.

- end of list** : Add the network at the last of the preferred list.
- index** : Specify a position in the list. However, the first position is fixed for "JP DoCoMo".
- Network Code →P571
- Tap [Cancel] to cancel saving.

③ Tap in the end of list or tap  /  in the *end of list* field to specify a position in the list

④ Tap [Done]

■ To delete a network from the preferred list

Tap *Preferred* tab ▶ a network to delete ▶ [Delete]

3 Tap a network to move ▶ [Up]/[Down] in the preferred list screen

NOTE

- The position of "JP DoCoMo" that appears at the top of the preferred list cannot be changed.
- If no available network is found, a network cannot be added to the preferred list.
- If 20 networks have already been saved in the Preferred list, no more can be added to the list. To add new entries, delete unnecessary networks.
- If an application is switched by switching to another application or actions of other applications (such as an incoming call) while you are entering a network code, the existing actions will not be retained.

Setting Operations in Roaming

Set operations for handling calls that arrive using a touch-tone landline or a payphone while you are using international roaming inside or outside Japan.

- For details about network services, refer to "Network Services Operation Guide".

Remote access control


Enabling Remote Operation of Network Services during Roaming

Default setting Remote access control:

When using Voice Mail or the Call Forwarding Service from outside Japan, *Remote access control* settings are necessary, because these services are treated as "Remote Operations".

- Setting must be done while in Japan.
- This operation can be performed only by subscribers of Voice Mail or Call Forwarding Service.
- For details on remote control, refer to "Network Services Operation Guide".
- Activate Voice Mail or the Call Forwarding Service before performing remote control.

1 Tap  (*Phone*) on the Application Selector bar ► *Settings* on the Menu bar ► *Roaming*

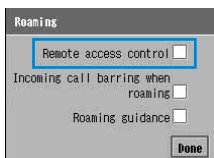

Roaming screen

Remote access control

: Sets whether to enable or disable Remote access control.

indicates enabled and indicates disabled.

2 Tap of *Remote access control*, and tap [Yes] on the start confirmation screen

- Tap [Cancel] on the start confirmation screen to cancel the operation.

Incoming call barring when roaming

Rejecting Calls while Roaming

Default setting Incoming call barring when roaming:

You can reject incoming voice or video calls and email or SMS messages while Roaming.

- Setting this option also disables downloading email by automatically connecting to the mail server (→P260) using the email notification of mopera U, etc.

1 Tap of *Incoming call barring when roaming* on the Roaming screen, and enter the Network Security Code on the Enter network password screen

Incoming call barring when roaming

: Set whether to enable Incoming call barring when roaming.

indicates enabled and indicates disabled.

- Displaying the Roaming screen →P575
- Tap [Cancel] on the Network password entry screen to cancel the operation.

NOTE

- The operation cannot be performed outside the service area or in an area where video signals are not available.

Roaming guidance

Enabling Guidance while Roaming

Default setting | Roaming guidance:

The handset can be set to play a message to a party who has attempted to call you while overseas informing the caller that you are overseas.

- If the guidance function is not set, the caller hears the call tone.
- Even if you have not enabled the guidance, a message in a foreign language may play depending on the conditions of the overseas network operator. The call tone may be different from that in Japan.
- Even when melody call is set, a ring tone or a voice announcement based on the settings of this function is played while using international roaming.

1 Tap of *Roaming guidance* on the Roaming screen and tap [Yes] on the start confirmation screen

Roaming guidance

: Sets whether to enable or disable Roaming guidance.

indicates enabled and indicates disabled.

- To a caller, a message "The receiver is in international roaming. Please hold while your call is being connected." is played.
- Displaying the Roaming screen →P575
- Tap [No] on the start confirmation screen to cancel the operation.

NOTE

- The operation cannot be performed outside the service area or in an area where radio signals are not available.